

1. While pressing the DOWN button on the Handpad turn the power ON



2. The GREEN light on the Servocat will come on and then start to blink



3. When the RED light comes on, release the DOWN button

4. The scope is now tracking

- Note that the Handpad defaults to GUIDE speed
- There are limit switches on the RA axis (to prevent the tube from hitting the pier) – if tripped they kill the power to the ServoCAT. You will have to:
  - a. turn the power off
  - b. manually move the scope off the switches
  - c. start again at #1